




- (51) International Patent Classification:
B60H 1/00 (2006.01) *F24F 11/00* (2006.01)
- (21) International Application Number:
PCT/IB2015/056169
- (22) International Filing Date:
13 August 2015 (13.08.2015)
- (25) Filing Language:
English
- (26) Publication Language:
English
- (30) Priority Data:
276/CHE/2015 19 January 2015 (19.01.2015) IN
- (71) Applicant: **L&T TECHNOLOGY SERVICES LIMITED** [IN/IN]; DLF IT SEZ Park, 2nd Floor - Block 3, 1/124, Mount Poonamallee Road, Ramapuram, Chennai 600089 (IN).
- (72) Inventors: **RAMAN, Krishnamoorthy**; L&T Technology Services Limited, KIADB Industrial Area, Hebbal-Hootagalli, Mysore 570018 (IN). **SUKUMARAN, Gineesh**;

L&T Technology Services Limited, KIADB Industrial Area, Hebbal-Hootagalli, Mysore 570018 (IN).

- (81) Designated States (*unless otherwise indicated, for every kind of national protection available*): AE, AG, AL, AM, AO, AT, AU, AZ, BA, BB, BG, BH, BN, BR, BW, BY, BZ, CA, CH, CL, CN, CO, CR, CU, CZ, DE, DK, DM, DO, DZ, EC, EE, EG, ES, FI, GB, GD, GE, GH, GM, GT, HN, HR, HU, ID, IL, IN, IR, IS, JP, KE, KG, KN, KP, KR, KZ, LA, LC, LK, LR, LS, LU, LY, MA, MD, ME, MG, MK, MN, MW, MX, MY, MZ, NA, NG, NI, NO, NZ, OM, PA, PE, PG, PH, PL, PT, QA, RO, RS, RU, RW, SA, SC, SD, SE, SG, SK, SL, SM, ST, SV, SY, TH, TJ, TM, TN, TR, TT, TZ, UA, UG, US, UZ, VC, VN, ZA, ZM, ZW.
- (84) Designated States (*unless otherwise indicated, for every kind of regional protection available*): ARIPO (BW, GH, GM, KE, LR, LS, MW, MZ, NA, RW, SD, SL, ST, SZ, TZ, UG, ZM, ZW), Eurasian (AM, AZ, BY, KG, KZ, RU, TJ, TM), European (AL, AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HR, HU, IE, IS, IT, LT, LU, LV, MC, MK, MT, NL, NO, PL, PT, RO, RS, SE, SI, SK,

[Continued on next page]

(54) Title: A SYSTEM AND METHOD FOR IDENTIFYING CO2 CONCENTRATION IN A BUILDING AREA

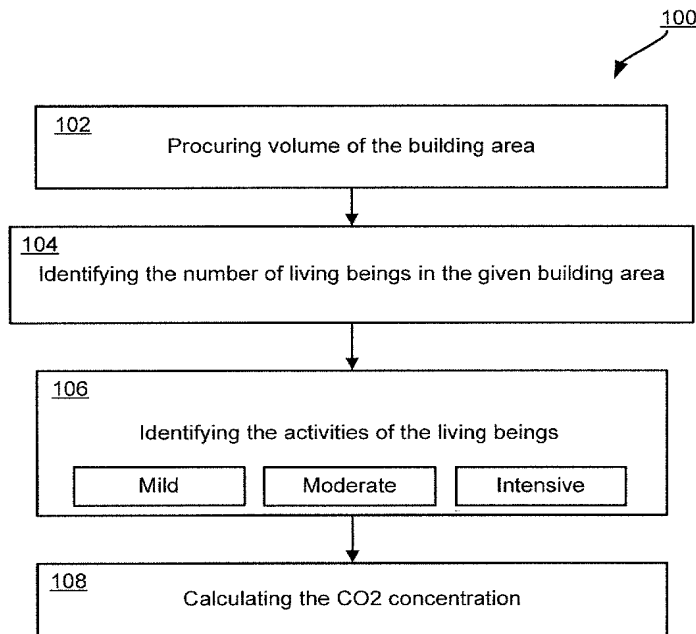

(57) Abstract: According to embodiments of the invention, a system 200 and method 100 for identifying CO₂ concentration in a building area using an imaging device 10 is disclosed. The disclosed method and system includes capturing the number of living beings present in a particular area of the building by the imaging device 10, identifying the active state of the living beings and categorizing the active state as per predefined criteria and identifying the CO₂ concentration based on the size of the building area, total number of living beings present in the building area and the active state of the living beings at a given point of time.

Figure 1





SM, TR), OAPI (BF, BJ, CF, CG, CI, CM, GA, GN, GQ, GW, KM, ML, MR, NE, SN, TD, TG).

— *as to the applicant's entitlement to claim the priority of the earlier application (Rule 4.17(iii))*

Declarations under Rule 4.17:

- *as to the identity of the inventor (Rule 4.17(i))*
- *as to applicant's entitlement to apply for and be granted a patent (Rule 4.17(ii))*

Published:

- *with international search report (Art. 21(3))*

A SYSTEM AND METHOD FOR IDENTIFYING CO₂ CONCENTRATION IN A BUILDING AREA

FIELD OF INVENTION

The invention generally relates to a system and method for identifying Carbon-dioxide (CO₂) level inside a building and particularly system and method for detecting Carbon-dioxide (CO₂) level inside a building through an imaging device.

BACKGROUND

Identification of Carbon dioxide (CO₂) level is critical and important function of a Heating/Ventilation/Air-conditioning (HVAC) duct system. Typically, for measuring carbon dioxide (CO₂) level, carbon dioxide (CO₂) detectors/sensors are employed in the building. Based on reading from the carbon dioxide (CO₂) detectors/sensors, the flow of fresh air can be increased or reduced into a particular part of the building.

Generally, CO₂ sensors for ventilation control are of two type i.e. photometric and photoacoustic. The photometric sensors have a sample compartment that contains a photodetector, a light source and an optical filter. The light source emits light in the infrared range and the optical filter ensures that only wavelengths in the absorbing spectrum of CO₂ enter the compartment containing the air sample. The photodetector measures the light intensity at a wavelength that may be absorbed by CO₂. The higher the CO₂ concentration in the sample air, the lower the measured light intensity.

The photoacoustic sensors have a sample compartment that contains a microphone and a light source for emitting infrared energy. The CO₂ molecules in the compartment absorb the infrared energy, which in turn increases the molecular vibration and generates an acoustic field. The microphone picks up the acoustic field and converts it to an electronic signal identifying the CO₂ concentration.

However, known CO₂ detectors face one or more issues such as interference from other gases (e.g. water vapor), accuracy and drift that may affect the sensor performance. Moreover, CO₂ detectors are very costly, require periodic maintenance and are not very accurate. Therefore,

there continues to be a need for maintenance free, cost effective and more accurate system and method for detecting CO₂ in a building.

The present invention is directed to overcoming one or more of the problems as set forth above.

SUMMARY OF THE INVENTION

According to embodiments of the invention, a system and method for identifying CO₂ concentration in a building area using an imaging device is disclosed. The disclosed method and system includes identifying the number of living beings present in a particular area of the building by processing images obtained from the imaging device; identifying the active state of the living beings and categorizing the active state as per predefined criteria; and identifying the CO₂ concentration based on the size of the building area, total number of living beings present in the building area and the active state of the living beings. The method may further include controlling the flow of fresh air by a HVAC system based on the CO₂ concentration.

The invention further discloses a system for identifying CO₂ concentration in a building area using an imaging device. The system may include a counting arrangement for counting number of living beings present in the building area by processing images obtained from an imaging device from the building area. The system may further include an activity analyses arrangement for identifying the active state of the living beings and categorizing the active state as per predefined criteria and a processor for calculating the CO₂ concentration in the building area based on the total number of living beings present in the building area and the active state of the living beings at a given point of time.

BRIEF DESCRIPTION OF DRAWINGS

Other objects, features, and advantages of the invention will be apparent from the following description when read with reference to the accompanying drawings. In the drawings, wherein like reference numerals denote corresponding parts throughout the several views:

Figure 1 illustrates an exemplary flow chart for a method for identifying CO₂ concentration in a building area according to an embodiment of the invention; and
Figure 2 illustrates an exemplary system for identifying CO₂ concentration in a building area according to another embodiment of the invention.

DETAILED DESCRIPTION OF DRAWINGS

According to an embodiment of the invention, a method for detecting CO₂ in a building area using an imaging device is disclosed. The imaging device may be selected from a group comprising digital camera, web cam, overhead camera, security camera, spy camera etc. Figure 1 illustrates an exemplary flow chart for a method 100 for identifying CO₂ concentration in a building area according to an embodiment of the invention. As illustrated at step 102 the method 100 includes procuring the volume of the building area where the concentration of CO₂ is required to be identified. According to an exemplary embodiment, the volume may be retrieved from a repository. According to yet another embodiment, the volume may be computed based dimensions of the building area.

At step 104, the method includes identifying number of living beings present in the given area. According to an embodiment, the number of living beings may be identified by keeping a count of incoming and outgoing living beings in the building area using live video feed from the imaging device. According to another embodiment, the number of living beings may be identified by analysing the images of the living beings in the area on real time basis.

According to yet another embodiment, the imaging device may perform a background modelling to eliminate noises due to illumination for effectively counting living beings in the building area. The background modelling involves detecting foreground objects and presenting the detected foreground objects to a binary classifier to distinguish the presence of living beings. According to an embodiment, the background modelling may be performed using any known methods for object detection such as but not limited to HAAR-Wavelet Transform, Gabor-Wavelet Transform, HAAR-Like Features, Histogram of Oriented Gradients etc.

According to an exemplary embodiment, to detect living being, either in static images or in videos, a frame may be identified. Once the frame is identified, the process of living being

identification may be divided into two parts i.e. Feature Extraction and Classification. The feature extraction includes extracting unique feature from the captured image or video. According to an exemplary embodiment, any known technique for feature extraction such as, but not limited to, Haar-Wavelet Transform, Viola-Jones Haar-like Features, Histogram of oriented Gradients, Haar-Wavelet Transform may be used. The classification step may use classifiers. According to an embodiment of the invention, two types of classifiers may be used Neural Networks and/or Support Vector machine (SVM).

At step 106, the method includes identifying the active state of the living beings in the area. According to an embodiment, the active state of the living beings may be identified by processing the video images captured by the imaging device on real time basis. According another embodiment, the identified active state of the living beings may be categorized as mild such as, but not limited to, sitting, sleeping etc., moderate such as, but not limited to, walking, eating etc., intensive such as, but not limited to, playing, jumping, running etc. The invention is not restricted to disclosed three categories and the categories may vary and may be predefined a system administrator without going beyond the scope of invention.

According to an exemplary embodiment, the process of identifying the active state of the living beings includes, corner detection, optical flow and velocity thresholds. The corner detection includes identification of significant points in an image where gradient magnitude in both X & Y directions is significant or greater than a threshold. According yet another embodiment, any of the known corner detection algorithms may be used such as Harris Corner Detector, SIFT, SURF etc. The corners identified from the corner detection algorithms may include living beings, object of interest and static background scene. To distinguish or filter moving objects corners from static background corners an Optical Flow algorithm may be employed. The optical flow is the pattern of apparent motion of objects, surfaces, and edges in a visual scene caused by the relative motion between an observer (an eye or a camera) and the scene. Using the optical flow algorithm, the direction and speed of moving objects from one image to another image may be measured in terms of velocity vectors. A predefined velocity threshold may be employed to separate moving objects corners from rest of the corners (corners of slow moving background objects like tree branches, Static Object corners and false velocity measures caused by illumination effects) in the consecutive frames.

To classify actions as mild, moderate or intensive the velocity of each corner in an image or frame may be identified. The velocity of the corners may be compared with the predefined velocity threshold. Based on the comparison, the motion of the objects may be categorised as still, mild, moderate or intensive. According to an embodiment, the amount of CO₂ generation by the living beings may vary based on the activity classification. According to another embodiment, the activity classification may be predefined in the system or may be procure on a real time basis through a network such as internet, intranet etc.

Table 1 below illustrate exemplary relation between carbon dioxide emission from persons and their activity:

Table 1

Activity	Respiration per Person (m ³ /h)	Carbon Dioxide Emission per Person (m ³ /h)
Sleep	0.3	0.013
Resting or low activity work	0.5	0.02
Normal work	2 - 3	0.08 - 0.13
Hard work	7 - 8	0.33 - 0.38

At step 108, the method calculates CO₂ concentration as a function of volume of the area, number of living beings present in the area and activities of the living beings present in the area as illustrated below:

$$K_{CO_2} = f(N_p, A_p, V_r)$$

Where N_p is the number of living beings present in the area, A_p is the active state of the living beings present in the area and V_r is the volume of the area.

Exemplary considering, imaging device identify N number of living being in a building area having volume V. On processing images from the imaging device, it is identified that out of N number of living being N1 living beings are engaged in mild activity, N2 living beings are engaged in moderate activities and N3 living beings are engaged in intensive activities.

$$N_p = N1 + N2 + N3$$

The total activity factor for the total number of people in the room An_p may be calculated as:

$$An_p = N1 * x + N2 * y + N3 * z$$

Where x, y and z are predefined constant for mild, moderate or intensive activities respectively. According yet another embodiment, the number of predefined activity constant is equal to the number of predefined active states. According yet another embodiment, the total activity factor An_p indicates the total CO₂ generated by the living beings present in the building area per hour. The amount of CO₂ generated in ppm per minute may be calculated using following equation:

$$K_{CO_2} = \frac{An_p * 60 * 10^3}{V_r}$$

According to another embodiment, for calculating the total concentration of CO₂ in the building area, apart from CO₂ generated, ventilation rate and CO₂ concentration outside building area may also be considered.

According to yet another embodiment based on CO₂ concentration the air circulation system of a HVAC system may be controlled.

According to an embodiment, the method steps may be performed in any sequence without going beyond the essence of the invention. According to another embodiment, the method may process all the functions simultaneously.

Figure 2 illustrates an exemplary block diagram of the system 200 for identifying CO₂ concentration in a building area according to an embodiment of the invention. The system 200 may be configured to receive images from an imaging device 10. The imaging device 10 may be any apparatus for capturing images such as but not limited to a digital video camera, web cam, overhead camera, spy cam etc. The system 200 may include a counting module 202 for counting number of living beings present in the building area. According to an embodiment, the counting module 202 may identify the number of living beings by processing images obtained from the imaging device. According to another embodiment, the images received from the imaging device 10 may be stored in an image repository 204 for further processing. The images may include still images and/or video images.

According to an embodiment, the counting module 202 may identify the number of living beings by processing the images to count the number of incoming and outgoing living beings from the building area. According to yet another embodiment, the counting module 202 may identify the number of living beings by analysing the images of the living beings in the area on real time basis.

The system 200 may have a volume identification module 206 for procuring the volume of the building where the concentration of CO₂ is required to be detected. According to an embodiment, the volume may be retrieved from a repository. According to yet another embodiment, the volume may be computed based on dimensions of the area procured from the images.

The system 200 may further include an activity analyses module 208 for identifying the active state of the living beings present in the building area. The activity analyses module 208 may further categorize the active state of the living beings as per predefined criteria. According to an embodiment, the activity analyses module 208 may identify the active state of the living beings by processing the images captured by the imaging device 10 on real time basis. According to another embodiment, the identified active state of the living beings may be categorized as mild, moderate or intensive by the activity analyses module 208. According to yet another embodiment, the invention is not restricted to disclosed three categories and it may vary without going beyond the scope of invention.

The system 200 may further have a module 210 for identifying the CO₂ concentration in the building area. The module 210 may identify CO₂ concentration as a function of volume of the area V_v , number of living beings present in the area N_p and the activities of the living beings present in the area.

According to an embodiment, the system 200 may have an inbuilt imaging device 10. According to another embodiment, the counting module 202, the volume identification module 206, the activity analyses module 208 and the CO₂ concentration calculation module 210 may reside in different processor. According to yet another embodiment, the counting module 202, the volume identification module 206, the activity analyses module 208 and the CO₂ concentration calculation module 210 may reside in a single processor.

In the foregoing detailed description of embodiments of the invention, various features are grouped together in a single embodiment for the purpose of streamlining the disclosure. This method of disclosure is not to be interpreted as reflecting an intention that the claimed embodiments of the invention require more features than are expressly recited in each claim. Rather, as the following claims reflect, inventive subject matter lies in less than all features of a single disclosed embodiment. Thus, the following claims are hereby incorporated into the detailed description of embodiments of the invention, with each claim standing on its own as a separate embodiment.

It is understood that the above description is intended to be illustrative, and not restrictive. It is intended to cover all alternatives, modifications and equivalents as may be included within the spirit and scope of the invention as defined in the appended claims. Many other embodiments will be apparent to those of skill in the art upon reviewing the above description. The scope of the invention should, therefore, be determined with reference to the appended claims, along with the full scope of equivalents to which such claims are entitled. In the appended claims, the terms "including" and "in which" are used as the plain-English equivalents of the respective terms "comprising" and "wherein," respectively.

We claim:

1. A method 100 for identifying CO₂ concentration in a building area using an imaging device 10 comprises:

obtaining the number of living beings present in a particular area of the building by processing images obtained from the imaging device;

identifying the active state of the living beings from the images and categorizing the active state as per predefined criteria; and

computing the CO₂ concentration based on the total number of living, the active state of the living beings and the size of the building area.

2. The method 100 as claimed in claim 1, wherein the predefined criteria for categorizing the active state of the living beings comprises categorizing active state as mild, moderate or intensive.

3. The method 100 as claimed in claim 1, wherein the number of living beings is identified by an algorithm selected from HAAR-Wavelet Transform, Gabor-Wavelet Transform, HAAR-Like Features or Histogram of Oriented Gradients.

4. The method 100 as claimed in claim 1 further comprises controlling the flow of fresh air by a HVAC system based on the CO₂ concentration.

5. A system 200 for identifying CO₂ concentration in a building area using an imaging device 10, the system 200 comprises:

a counting module 202 for counting the number of people from the images obtained by the imaging device 10,

an activity analyses module 208 for identifying the active state of the living beings by processing images obtained by the imaging device 10 and categorizing the active state as per predefined criteria; and

a CO₂ concentration calculation module 210 for calculating the CO₂ concentration based on the information obtained from the counting module 202, the activity analyses module 208 and a volume identification module 206.

6. The system 200 as claimed in claim 5, wherein the predefined criteria for categorizing the active state of the living beings comprises categorizing active state as mild, moderate or intensive.

7. The system 200 as claimed in claim 5 further comprises controlling the flow of fresh air by a HVAC system based on the CO₂ concentration.

8. The system 200 as claimed in claim 5 further comprises an imaging device.

9. The system 200 as claimed in claim 5, wherein the volume identification module 206 identifies the volume of the building where the concentration of CO₂ is required to be detected based on dimensions of the area procured from the images.

10. An imaging device 10 comprising:

a counting module 202 for counting the number of people from the images obtained by the imaging device 10,

an activity analyses module 208 for identifying the active state of the living beings by processing images obtained by the imaging device 10 and categorizing the active state as per predefined criteria; and

a CO₂ concentration calculation module 210 for calculating the CO₂ concentration based on the information obtained from the counting module 202, the activity analyses module 208 and a volume identification module 206.

1/2

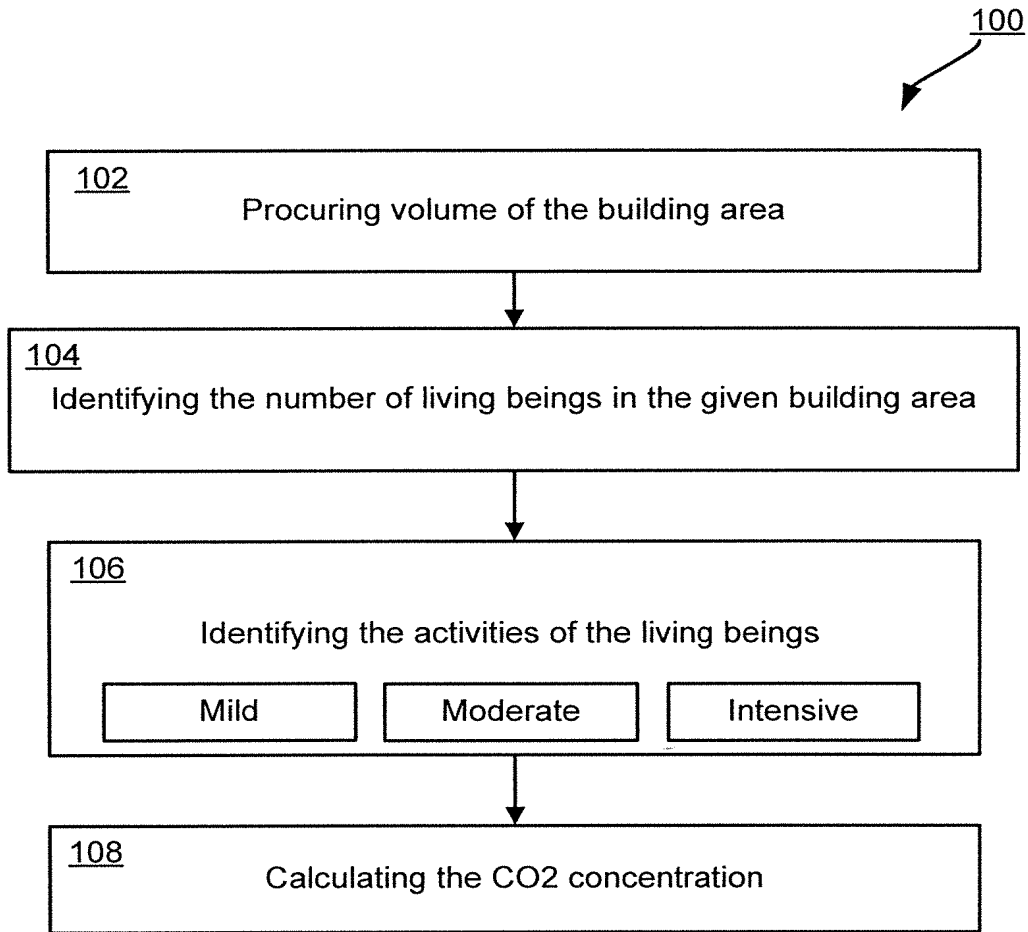


Figure 1

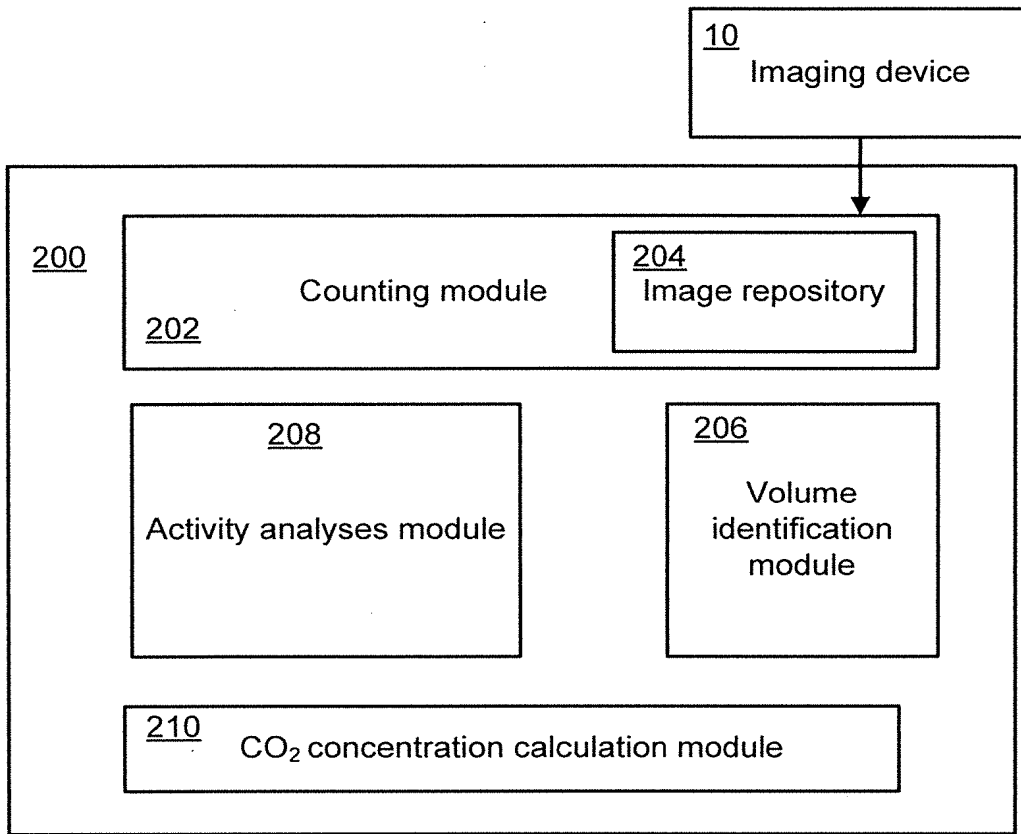


Figure 2

INTERNATIONAL SEARCH REPORT

International application No.
PCT/IB2015/056169

A. CLASSIFICATION OF SUBJECT MATTER
B60H1/00, F24F11/00 Version=2015.01

According to International Patent Classification (IPC) or to both national classification and IPC

B. FIELDS SEARCHED

Minimum documentation searched (classification system followed by classification symbols)

B60H, F24F

Documentation searched other than minimum documentation to the extent that such documents are included in the fields searched

Electronic data base consulted during the international search (name of data base and, where practicable, search terms used)

PATSEER, IPO Internal Patent database

C. DOCUMENTS CONSIDERED TO BE RELEVANT

Category*	Citation of document, with indication, where appropriate, of the relevant passages	Relevant to claim No.
A	US7369955 B2 (Peng Lee) 06-May-2008 Abstract, whole document	1-10
A	US20130079658 A1 (George Cunha Cardoso et. al.) 28-March-2013 Abstract, whole document	1-10

Further documents are listed in the continuation of Box C.

See patent family annex.

* Special categories of cited documents:

"A" document defining the general state of the art which is not considered to be of particular relevance

"E" earlier application or patent but published on or after the international filing date

"L" document which may throw doubts on priority claim(s) or which is cited to establish the publication date of another citation or other special reason (as specified)

"O" document referring to an oral disclosure, use, exhibition or other means

"P" document published prior to the international filing date but later than the priority date claimed

"T" later document published after the international filing date or priority date and not in conflict with the application but cited to understand the principle or theory underlying the invention

"X" document of particular relevance; the claimed invention cannot be considered novel or cannot be considered to involve an inventive step when the document is taken alone

"Y" document of particular relevance; the claimed invention cannot be considered to involve an inventive step when the document is combined with one or more other such documents, such combination being obvious to a person skilled in the art

"&" document member of the same patent family

Date of the actual completion of the international search

09-12-2015

Date of mailing of the international search report

09-12-2015

Name and mailing address of the ISA/

Indian Patent Office
Plot No.32, Sector 14, Dwarka, New Delhi-110075
Facsimile No.

Authorized officer

Prashant Kutare

Telephone No. +91-1125300200